

VERSION INFORMATION

1.0.90

- Added dithered output to LSR generation
- Added ability to duplicate a plate, along with a hot key for doing so.
- Fixed bug where resizing a plate would not reset objects in center of plate
- Fixed bug where vectors were being sent as fills to printer output.
- Select all is now an option in the preferences sections.
- View is now in the menu tabs.
- Wireframe is now in the menu tabs.
- ctrl+page down makes a new plate.
- ctrl+N is now a hot key for mew plate.
- Added a character counter.
- Added ability to make square corner rectangles by adding square pen to pen options.
- Select all is now in both master setting dialog as well as text properties dialog.
- Added table size to LSR dialog in EDI.
- Fixed bug where dumb text quotes were being changed to smart text quotes.
- Added ability to use either straight quotes or dumb typographic quotes.
- Fixed bug with round corner grid cutout.
- Fixed object margins bug when resizing plates.
- Added Print Current Plate only to print dialog.
- Fixed smart quotes in opening XEM's.
- Fixed bug where grid cutout would not go out when printing single plate.
- Added ability to open XOT's
- Added ability to import XLG's
- Fixed bug with alt codes not coming in correct.
- Fixed bug with using global pick up values in serialization.
- Fixed bug with some unlock keys failing and requiring a new unlock.
- Fixed bug with serpentine fill when cutter size is large.

1.0.87	 Select all buttons added when saving preferences Veiw options now available in Jobs tab for Wireframe view, and plate, master, and object view Ctrl + Pg down duplicates the plate you are on Text merge has option to make all text caps The job tab now has a character count feature
1.0.86	New EDI and .lsr file generator to allow Carpathia to directly run Xenetech lasers
1.0.85	 Grade II braille translation installed. Fixed a couple of very obscure bugs that we found in the EDI have been fixed
1.0.84	 Improved cylindrical attachment operations Made engrave delay work for every plung in multi pass
1.0.83	 Global settings for using baseline or not when spacing with XEM or Import New F8 spacing feature in the master settings dialogue allows you to set the spacing at the top and bottom of the plate using a percentage value of the spaces between lines. More effecient round corner grid cut.
1.0.82	 Moving hand now automatically appears over a selected object. The auto hand feature can be turned of in the new "Global" tab at the top. If you are holding ctrl to do multiple selections the hand does not appear. Handles now appear on selection box allowing you to size objects with the mouse.
1.0.81	 Added Lock Aspect Ratio to Edit Height and Edit Width Dialogs Can now import JPEGS and Bitmaps Double clicking objects now opens appropriate dialog Swapped slow\fast object moving speeds F8 now uses baselines when all selected objects are Text F8 + CTRL ignores baselines on text
1.0.79	 Now opens XGW XEM files Close all open jobs without saving ALT+X Ability to turn off left and top grid cut lines if you are against the rulers in the print dialog
1.0.74	 F2 toggles between EDI and Carpathia Switch to allow EDI to close when job is finished Aspect ratio
1.0.73	Cutter suggestions

	 Ability to name and save multiple temp home positions Pointer offset Combine vectors with text for route out text 10 most recent list for file open Hot key for select all engraving font text
1.0.71	 Multi pass improvements Auto Aspect Ratio on Text Merge and Text Merge Extend XYZ locations should now correctly update in EDI after using pendant home/temp home buttons